


# AUTOMATIC BATTERY RECONNECT - BCC UPGRADE

JUNE 19, 2003

## INSTALLATION INSTRUCTIONS

1. Remove the cover from the Battery Control Center.
2. Locate the four-pin plug from the Battery Disconnect, which is along the left side of the large isolator relay.
3. Pull this four-pin plug and socket apart.
4. Connect the two four-pin plug and socket from the new module to the respective plugs.
5. Locate and pull the four-pin plug from the printed circuit board. Plug the short jumper harness into the board connector.
6. Plug the harness from the coach into the four-pin plug on the short jumper harness.
7. Slide the new module along side the isolator relay to secure it.
8. Replace the cover on the Battery Control Center.

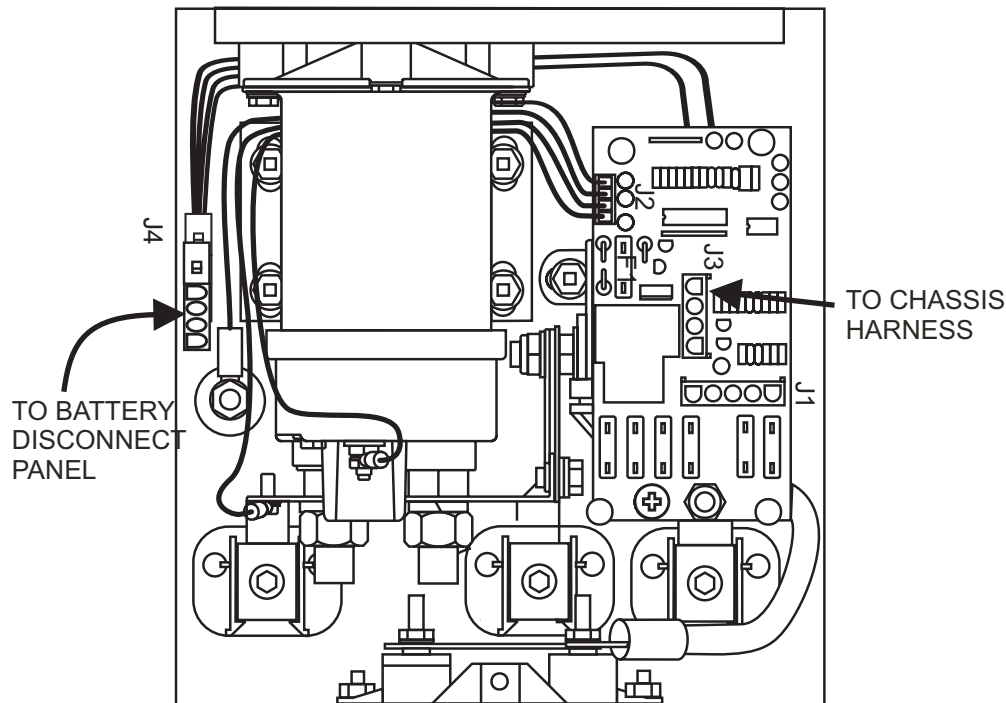

## TESTING

1. With the ignition off, disconnect the coach battery using the Disconnect Switch in the coach.
2. Be sure the battery is disconnected, by turning on a known working light. It should ***not*** be ON.
3. Turn ON the ignition switch.

**Intellitec**

131 Eisenhower Lane North  
Lombard, IL 60148  
630.268.0010 / 1.800.251.2408