

Description:

Intellitec Road Commander modules use various LED "blink" codes to indicate the status of module inputs, outputs, and errors. These codes are summarized below.

1094 Wireless Module:

Green LED	1 50 sec flash every 100 sec – Module OK
Blue LED	Wireless communication active
Red LED	 1 Flash – CAN Error (No CAN data found) 2 Flashes – PMC error 3 Flashes – CAN and PMC error

1095 Low Current and 1096 High Current Modules

Input LED	ON - Input active	
Output LED	ON - Output active Flash ½ sec every 1 sec - Output overcurrent.	
Green LED	ON - Module is awake	
Blue LED	1 blink at half hertz rate - CAN network active.	
Red LED	 1 blink – CAN data sync fault 3 blinks – Short Circuit fault 4 blinks – Overcurrent fault 7 blinks – No CAN data found 	

All LEDs flash Network address error: Two modules with the same address.



Road Commander LED Status Codes 53-01094-300



1097 System Monitor Module:

Green LED	ON – System	monitor data	is heing	requested
	Old System	monitor aata	15 NCIIIS	requested

- Blue LED 1 blink at half hertz rate CAN network active.
- All LEDs flash Network address error: Two modules with the same address.

1105 HVAC Module

Output LED	ON - Output active
Green LED	ON - Module is awake
Blue LED	1 blink at half hertz rate - CAN network active.
Red LED	1 blink – CAN data sync fault 7 blinks – No CAN data found

All LEDs flash Network address error. Two modules with the same address.

1108 Generator Start Module

- Input LED ON Input active
- Output LED ON Output active
- Green LED ON Module is awake
- Blue LED 1 blink at half hertz rate CAN network active.
- Red LED 1 blink CAN data sync fault
 - 3 blinks Generator failed to start
 - 4 blinks Generator failed to stop
 - 7 blinks No CAN data found
- All LEDs flash Network address error: Two modules with the same address.

