



ELECTRONIC CLIMATE CONTROL

SERVICE BULLETIN

To minimize large temperature swings in the motorhome.

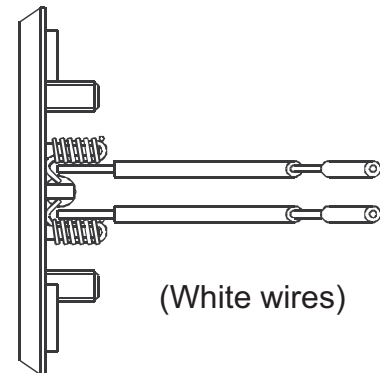

Old temp probe assembly
P/N 00-00356-000

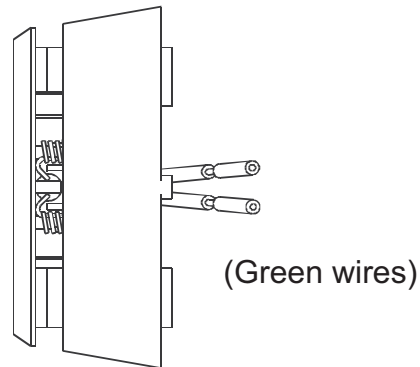

New temp probe assembly
P/N 00-00356-100

Procedure

- 1) Remove the two screws holding the old probe (00-00356-000) to the wall.
- 2) Pull assembly from the wall and cut both white wires.
***Leave enough wire for the connection of the new wires.**
- 3) Splice green wires from the new assembly (00-00356-100) together with the wires coming out of the wall. Polarity is NOT important.
- 4) Push wires back into wall and screw the new assembly into place.

This will move the temperature sensing device out of the wall and into the room.

Intellitec

1485 Jacobs Rd.
Deland, FL 32724
386.738.7307