


---

**THIS INSTALLATION KIT USED ON THE FOLLOWING SMART EMS SYSTEMS:  
MODELS 700, 750 & 900**

---

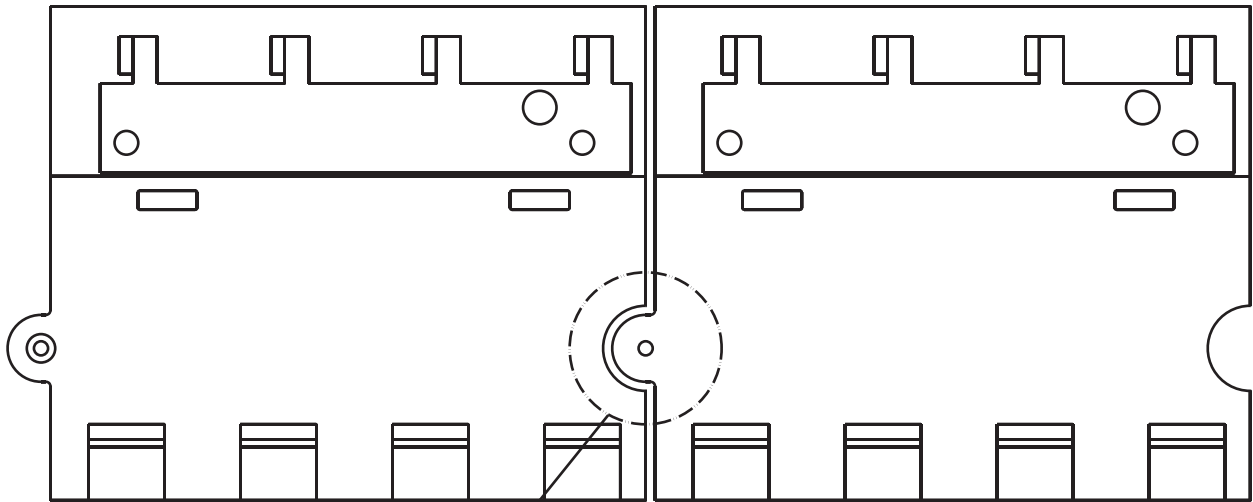

BOSS HOLE FOR  
HOLD-DOWN SCREW  
(SEE NOTE 2)

CONTENTS OF MAIN  
BREAKER HOLD-DOWN KIT:

- (1) - POLYBAG
- (1) - #6 x 3" LONG SCREW
- (1) - #6 PLAIN WASHER
- (1) - INSTRUCTION SHEET

**INSTALLATION INSTRUCTIONS:**

- 1) **"CAUTION"** - TURN OFF POWER AHEAD OF THIS LOAD CENTER BEFORE INSTALLING KIT. HAZARDOUS VOLTAGE CAN CAUSE INJURY OR DEATH.
- 2) MAIN CIRCUIT BREAKERS POSITIONED HERE BETWEEN THE 2 PLASTIC BLOCKS AND PRESSED ONTO ALUMINUM "STAB" STUDS (WHICH ARE PART OF THE PLASTIC BLOCKS).
- 3) THREAD-CUTTING SCREW FROM KIT IS PASSED THRU THE OPENINGS IN THE BREAKER WALL AND INTO THE BOSS HOLE IN THE PLASTIC BLOCK.
- 4) INSTALLER TO APPLY 3-5 IN/LBS TO 3" LONG SCREW WITH PLAIN WASHER UNDER SCREW HEAD.

 **Intellitec**  
1485 Jacobs Rd.  
Deland, FL 32724  
386.738.7307

P/N 53-00894-800 Rev. C 100506