BATTERY GUARD 2000 200A

INSTALLATION GUIDE

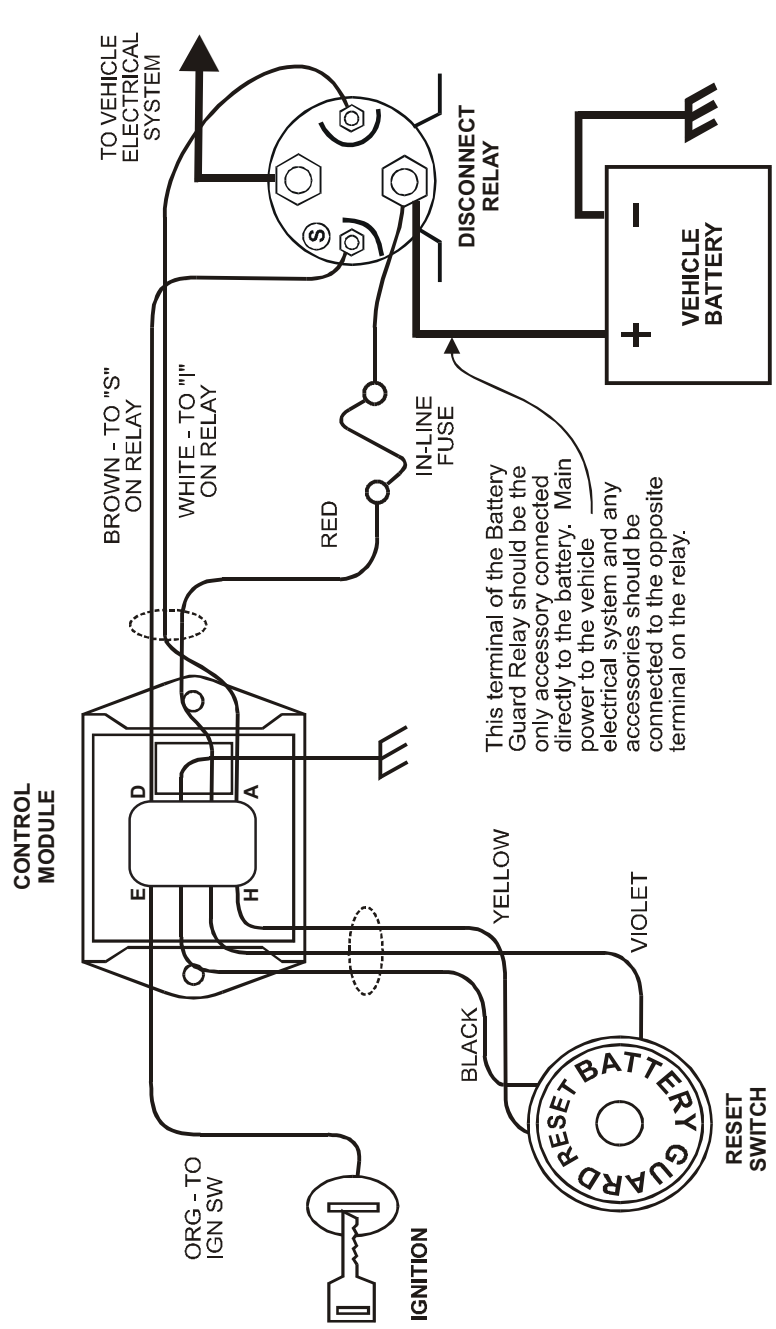

Module Connections	
A - "I" Terminal -	White
B - VBAT -	Red
C - Ground -	Black
D - "S" Terminal -	Brown
E - Ignition -	Orange
F - Ground -	Black
G - Switch -	Violet
H - LED -	Yellow

TYPICAL WIRING DIAGRAM

Torque requirements for the high power copper contact studs should be 10-20 FT-LBS.

Intellitec

1485 Jacobs Rd.
Deland, FL 32724
386.738.7307